

SERVICE PROGRAM MODE TABLES

7508*	Original Jam History	
001	Original Latest	Displays the following items for the Latest 10 original jams: 1) Jam code, 2) Paper size, 3) Total count when jam occurred, 4) Date of jam. <i>The "jam codes" are listed in the SMC report under SP7504.</i>
002	Latest 1	
003	Latest 2	
004	Latest 3	
005	Latest 4	
006	Latest 5	
007	Latest 6	
008	Latest 7	
009	Latest 8	
010	Latest 9	

7617	Parts PM Counter Display	
001	Normal	Japan Only
002	DF	Japan Only

7618	PM Parts Counter Reset Japan Only	
001	Normal	Press Execute to clear the parts replacement alarm counter for the main machine.
002	DF	Press Execute to clear the parts replacement alarm counter for the ADF.

7801*	ROM No./Firmware Version	Displays the ROM version numbers of the main machine and connected peripheral devices.
7803*	PM Counter Display	Displays the PM count since the last PM.
7804*	PM Counter Reset	Resets the PM count.
7807*	SC/Jam Counter Reset	Press Start to reset the SC and jam counters.
7808*	Counters Reset (B064 only)	Pressing the # key will reset all counters, except for the following: <ul style="list-style-type: none"> • Optional card/key counters • Total electronic counts • Copy count • Print count • Duplex count • Staple count • A3/DLT count • P/O count • C/O count
7810*	Key Operator Code Clear (B064 only)	Press # to clear the key operator code if the customer key operator forgets the password and the machine cannot be used.

7811*	Original Feed Count Clear (B064 only)	
	Clears the original total display, displayed with SP7002-***. To clear, press ①.	

Service Tables